




Ideal Standard, S.L.
C/Sant Marti, s/n
08107 Martorelles
Spain
Tel.: 93 544 01 60

Ideal Standard
Scandinavia A/S
7100 Vejle
Sverige
Tlf.: +46 821 31 10
Norge
Tlf.: +47 22 73 35 0

Ideal Standard
Magyarország
1119 Budapest
Tel.: +36 1 37 10 7
Fax: +36 1 37 10 7
E-mail: BudapestOffice@aseur.com

Ideal Standard s.r.o.
servisní středisko
Zemská 623
415 74 Teplice
Česká republika
Tel.: +420 417 592 179
+420 417 592 307
Fax: +420 417 592 262
E-mail: servis@aseur.co

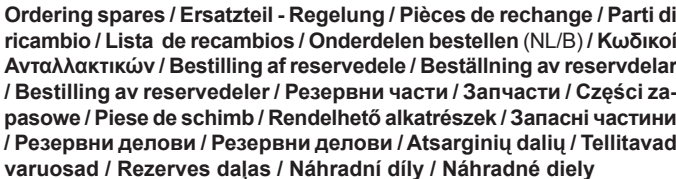

Exploded view diagram of a water tap assembly. The diagram shows the following components and their labels:


- 1** B 960707 XX
- 2** A 963667 NU
- 3**
- 4** B 960708 XX
- 5** B 960709 XX
- 6** B 960710 NU
- 7** A 960569 NU
- 8**
- 9**
- 10**
- 11** A 961332 NU
- 12** B 960712 XX
- 13** B 964702 NU
- 14** A 961230 XX
- 15** B 960851 XX
- 16** F 960181 XX
- 17** B 960501 NU
- 18**
- 19**
- 20** H 961506 NU
- 21** B 960474 NU
- 22** B 960915 XX
- 23**








MARA

11.2009 / B 865531

A 9029 .

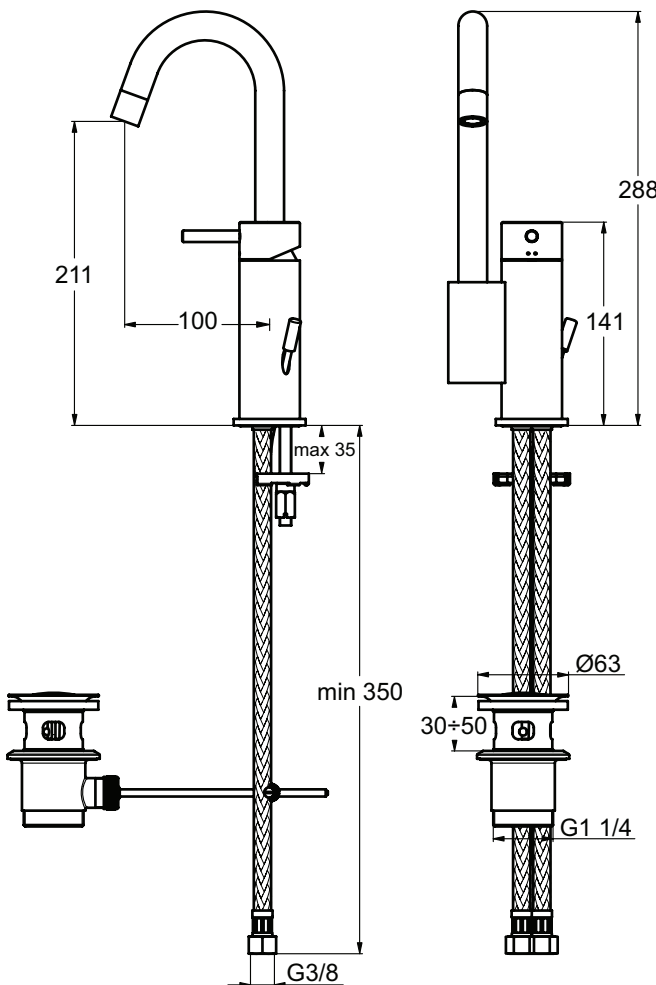

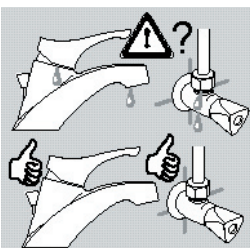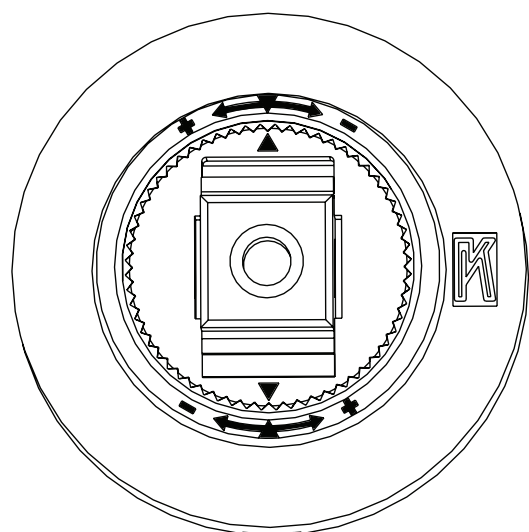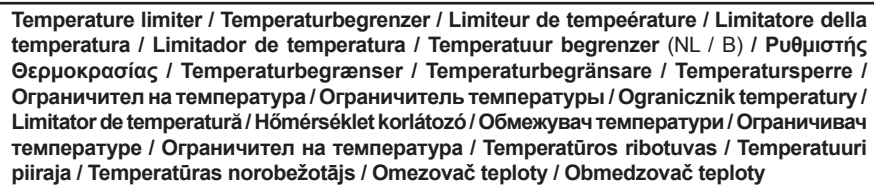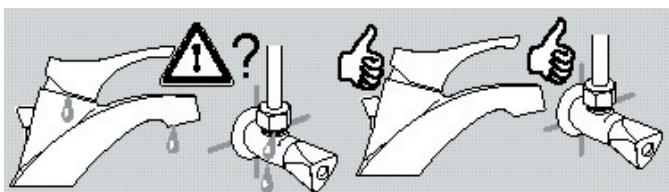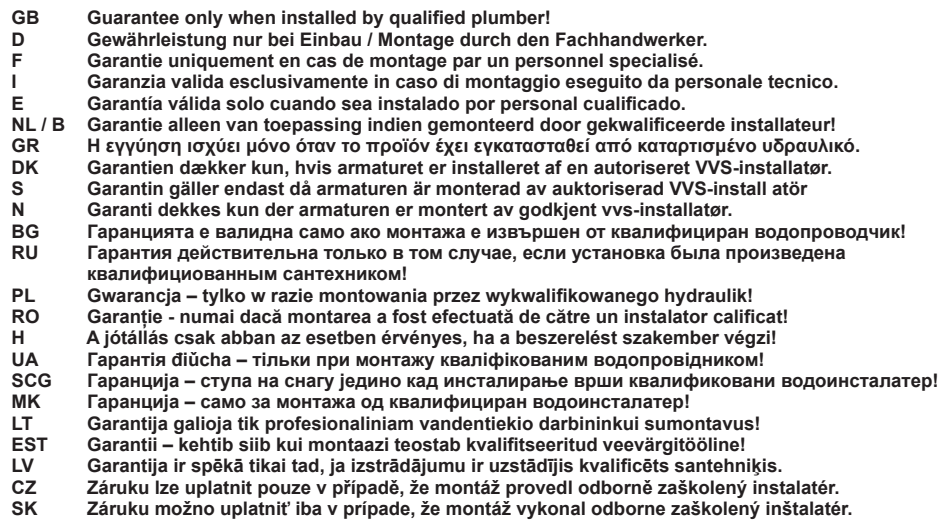

Q
(3 bar)

12