
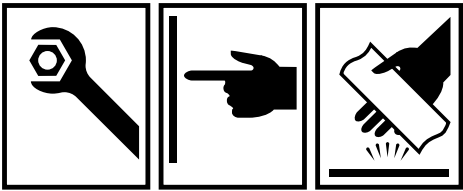


Ordering spares / Ersatzteil - Regelung / Pièces de rechange / Parti di ricambio / Lista de recambios / Onderdelen bestellen (NL/B) / Κωδικοί Ανταλλακτικών / Bestilling af reservedele / Beställning av reservdelar / Bestilling av reservedeler / Резервни части / Запчасти / Części zapasowe / Piese de schimb / Rendelhető alkatrészek / Запасні частини / Резервни делови / Резервни делови / Atsarginių dalių / Tellitavad varuosad / Rezerves daļas / Náhradní díly / Náhradné diely / Yedek parça siparişi / Nadomestni deli

XX = AA, AD,

- 1 - B D140 XX
- 2 - B 960976 XX
- 3 - B C774 XX
- 3a - B 9402 XX
- 4 - B E175 XX
- 4a - B 961890 XX
- 5 - B 961891 XX

	P bar				Q (3 bar)
	T °C				I/min
					8 12


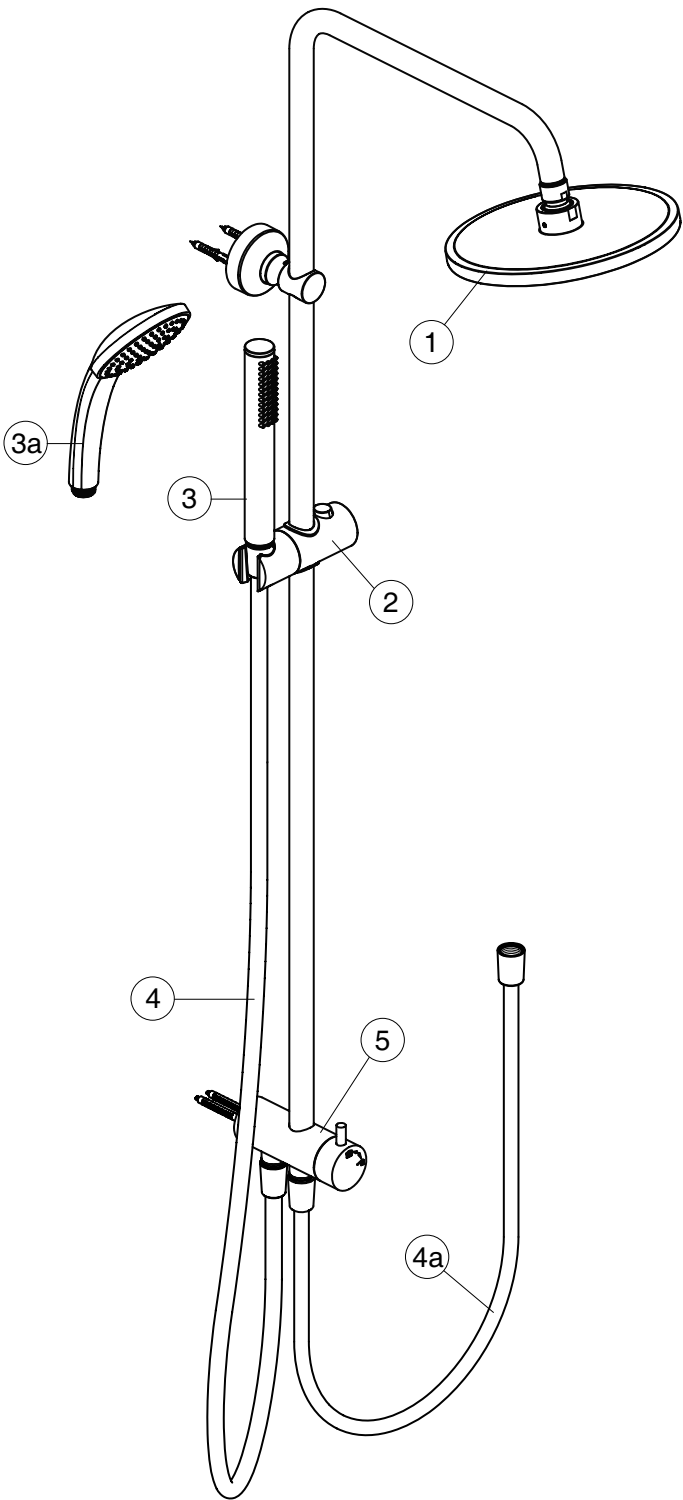



Ideal Standard

IDEALRAIN

04.2023 / B565122

B C747 XX

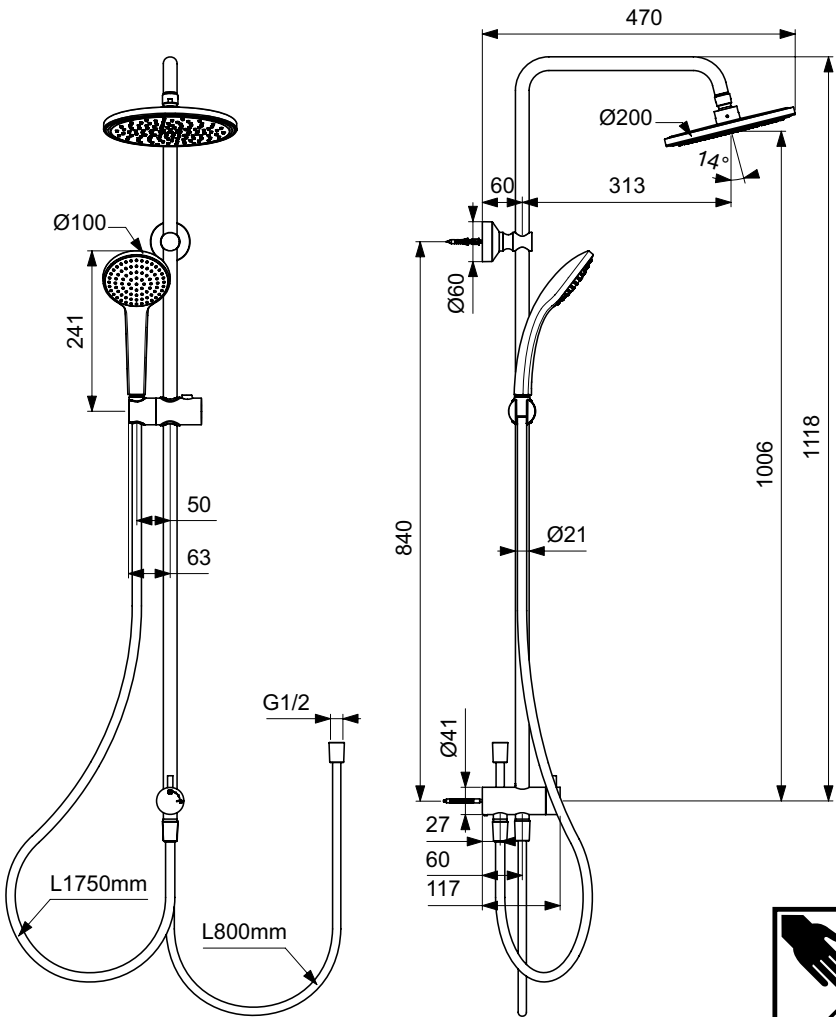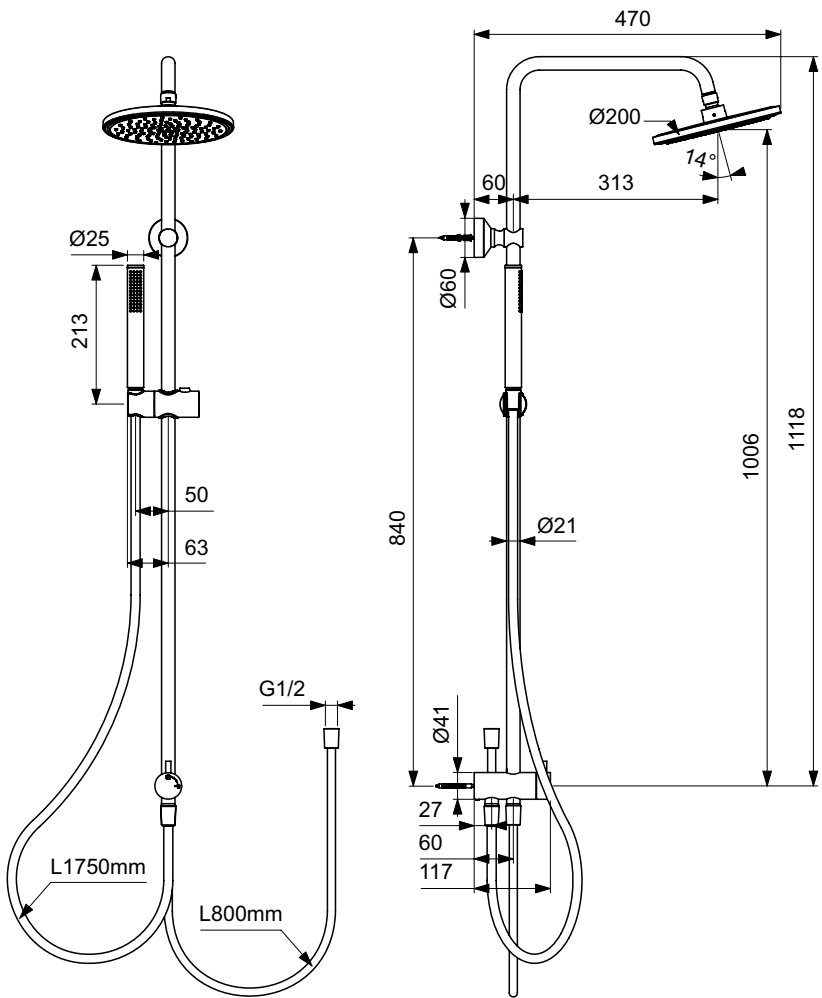

Ideal Standard International NV
Corporate Village – Gent Building
Da Vincilaan 2
1935 Zaventem
Belgium
<http://www.idealstandardinternational.com>

